


CLIO

ELECTRICAL & ACOUSTICAL TESTS

User's Manual

Version 4.0



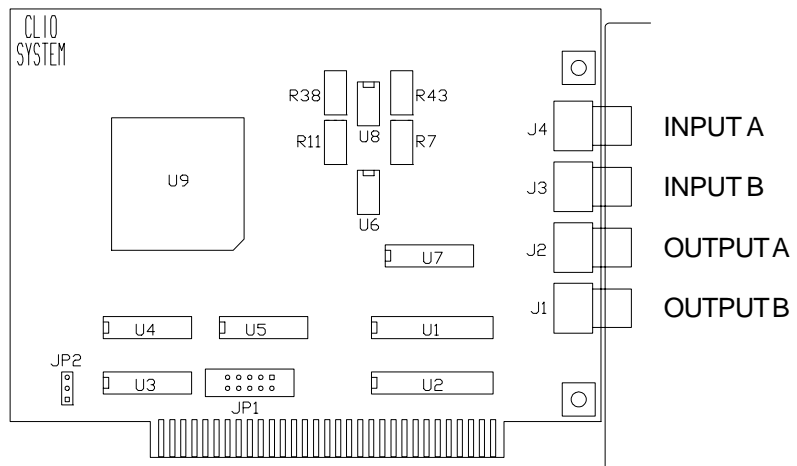

The CLIO PC board

© Copyright 1991–99 by AUDIOMATICA SRL

All Rights Reserved

Edition 4.05, May 1999

IBM is a registered trademark of International Business Machines Corporation.
Windows is a registered trademark of Microsoft Corporation.

CONTENTS

1 INTRODUCTION.....	9
1.1 GENERAL CONDITIONS AND WARRANTY	9
1.2 THE HARDWARE OF CLIO	11
1.3 THREE SOFTWARE VERSIONS	11
1.4 THE CLIO SYSTEM MEASUREMENT TECHNIQUES	11
1.4.1 MLS ANALYSIS	11
1.4.2 SINUSOIDAL ANALYSIS	12
1.4.3 THIRD OF OCTAVE ANALYSIS	12
1.4.4 EQUIVALENT LEVEL MEASUREMENT	12
1.4.5 FFT ANALYSIS AND OSCILLOSCOPE	12
1.4.6 SIGNAL GENERATOR AND MILLIVOLTMETER	13
1.4.7 THE RELEASE 4 USER INTERFACE	13
1.5 THE QC (QUALITY CONTROL) MEASUREMENT MENU PLUG-IN	14
2 THE CLIO SYSTEM	15
2.1 THE HR-2000 PC BOARD	15
2.1.1 TECHNICAL SPECIFICATIONS	15
2.2 THE MIC-01 MICROPHONE	17
2.2.1 THE MIC-02 MICROPHONE	17
2.2.2 TECHNICAL SPECIFICATIONS	17
2.3 THE PRE-01 MICROPHONE PREAMPLIFIER	18
2.3.1 TECHNICAL SPECIFICATION	18
2.3.2 USE OF THE PREAMPLIFIER	18
2.4 THE CLIOQC AMPLIFIER & SWITCH BOX	19
2.4.1 TECHNICAL SPECIFICATIONS	20
3 INSTALLATION OF CLIO	21
3.1 PC CONFIGURATION	21
3.2 HARDWARE INSTALLATION	21
3.3 SOFTWARE INSTALLATION	22
3.4 RUNNING CLIO FOR THE FIRST TIME	23
3.5 CLIO CONNECTIONS	25
4 PC COMPATIBILITY	31
4.1 HARDWARE COMPATIBILITY	31
4.2 SOFTWARE COMPATIBILITY	31
5 CLIO'S USER INTERFACE	33
5.1 GENERAL INFORMATION	33
5.2 MENUS	33
5.3 CONTROL PANELS	34
5.4 HOT KEYS	36
5.5 CLIO HELP ON LINE	37

6 DISK MENU AND FILES MANAGEMENT	39
6.1 INTRODUCTION	39
6.2 DATA FILES ORGANISATION	39
6.3 LOADING FILES	39
6.4 SAVING FILES	40
6.5 Mkdir	41
6.6 Chdir	41
6.7 Setup	41
6.8 Calibration	41
6.8 Exit	41
7 CONFIGURING AND CALIBRATING CLIO	43
7.1 INTRODUCTION	43
7.2 SOFTWARE STARTUP OPTIONS	43
7.3 MEASUREMENT SETTINGS	44
7.3.1 INPUT CHANNEL	44
7.3.2 SAMPLING FREQUENCY	44
7.3.3 PRESSURE MODE AND MICROPHONE CORRECTION	45
7.3.4 THE Globals BUTTON	45
7.4 THE DISK Setup CHOICE	46
7.4.1 PRINTERS	46
7.4.2 COLOURS	46
7.4.3 I/O ADDRESS	46
7.4.4 EXTERNAL HARDWARE CONTROL	47
7.5 THE SETUP FILE	47
7.6 CALIBRATING CLIO	48
7.6.1 THE DISK Calibration CHOICE	48
8 TOOLS MENU	51
8.1 GENERATOR & LEVEL METER CONTROL PANEL	51
8.1.1 INTRODUCTION	51
8.1.2 LEVEL METER	51
8.1.3 SIGNAL GENERATOR	52
8.1.4 OUTPUTS CONTROL	53
8.1.5 INPUTS CONTROL	53
8.1.6 THE Sett BUTTON	54
8.2 L-C METER CONTROL PANEL	54
8.3 SCOPE CONTROL PANEL	55
8.3.1 INTRODUCTION	55
8.3.2 FUNCTION BUTTONS	55
9 FFT MENU	57
9.1 INTRODUCTION	57
9.2 FFT CONTROL PANEL	57
9.2.1 FFT MEASUREMENT SETTINGS AND LOCAL SETTINGS	57
9.2.2 GRAPH CONTROL	59
9.2.3 FUNCTION BUTTONS	60
9.2.4 AUXILIARY INFORMATION	61

10 MLS MENU 63

10.1 INTRODUCTION 63
10.2 DESCRIPTION OF MLS THEORY 63
10.3 MLS ANALYSIS CONTROL PANEL 65
 10.3.1 FUNCTION BUTTONS 65
 10.3.2 THE MLS SETTINGS DIALOG BOX 69
10.4 IMPULSE RESPONSE CONTROL PANEL 71
 10.4.1 THE MARKER AND WINDOW INDICATORS 72
 10.4.2 FUNCTION BUTTONS 72
 10.4.3 OTHER HOT KEYS 73
10.5 ETC CONTROL PANEL 74
 10.5.1 FUNCTION BUTTONS 74
10.6 WATERFALL CONTROL PANEL 76
 10.6.1 FUNCTION BUTTONS 77
10.7 CONDUCTING “ANECHOIC” MEASUREMENTS 78
 10.7.1 MEASUREMENT SETUP 78
 10.7.2 SOUND REFLECTIONS WITHIN A ROOM 79
 10.7.3 TAKING THE MEASUREMENT 80
10.8 PREPARING A WATERFALL PLOT 82

11 SINUSOIDAL MENU 85

11.1 INTRODUCTION 85
11.2 FREQUENCY RESPONSE 85
 11.2.1 MEASUREMENT SETTINGS 85
 11.2.2 SWEPT THD RESPONSE 86
 11.2.3 SINUSOIDAL MEASUREMENTS WITH GATING 87
 11.2.4 OTHER FUNCTION BUTTONS 87
11.3 IMPEDANCE 90
 11.3.1 FUNCTION BUTTONS 90
11.4 SPEAKER PARAMETERS 94
 11.4.1 FUNCTION BUTTONS 94
 11.4.2 ADVICE AND CAUTIONARY NOTES 96
 11.4.3 SPEAKER PARAMETER SYMBOLS 97
11.5 DISTORTION 98
 11.5.1 FUNCTION BUTTONS 98
 11.5.2 DISTORTION SETTINGS 99
 11.5.3 WARNINGS 99
11.6 POLAR 100
 11.6.1 POLAR SETTINGS 100
 11.6.2 OTHER FUNCTION BUTTONS 101
 11.6.3 MEASUREMENT INFORMATION 101

12 RTA MENU 103

12.1 INTRODUCTION 103
12.2 ONE-THIRD-OCTAVE ANALYSIS USING CLIO 103
12.3 RTA CONTROL PANEL 104
12.4 AUXILIARY INFORMATION 105
12.5 IASCA SCORING 106

13 FILE EXPORT AND IMPORT 107

13.1 GENERAL INFORMATION 107

13.2 EXPORT	107
13.2.1 FFT	107
13.2.2 MLS	108
13.2.3 SINUSOIDAL FREQUENCY RESPONSE AND IMPEDANCE	109
13.2.5 SINUSOIDAL PARAMETERS	110
13.2.6 SINUSOIDAL DISTORTION	111
13.2.7 SINUSOIDAL POLAR	111
13.2.8 RTA	112
13.3 IMPORT	113

14 ACOUSTICS MENU..... 115

14.1 INTRODUCTION	115
14.2 REVERBERATION TIME ANALYSIS	115
14.3 THE RT60 CONTROL PANEL	116
14.3.1 FUNCTION BUTTONS	116
14.3.2 OCTAVE BUTTONS	118
14.3.3 LIMITS BUTTONS	118
14.4 LEQ ANALYSIS	119
14.4.1 EQUIVALENT LEVEL CALCULATIONS	119
14.5 THE LEQ CONTROL PANEL	120
14.5.1 FUNCTION BUTTONS	120

15 QUALITY CONTROL MENU 123

15.1 INTRODUCTION	123
15.2 THE QUALITY CONTROL SOFTWARE OPERATION	124
15.2.1 HOW IT WORKS	126
15.2.2 EXTERNAL TRIGGER	128
15.3 QC FILES	129
15.3.1 THE SETUP FILE	129
15.3.2 REFERENCE FILES	130
15.3.3 LIMITS FILES	131
15.3.4 THE CYCLIC FILE	131
15.3.5 RESULT REPORTING	132
15.3.6 AUTOSAVED DATA FILES	133
15.4 DEFINITION OF A QC MEASUREMENT	134
15.4.1 LEVEL QC TEST	134
15.4.1 FFT QC TEST	136
15.4.2 MLS QC TEST	138
15.4.3 POLARITY CHECK	142
15.4.4 IMPEDANCE QC TEST	143
15.4.5 SWEEPS GENERATION AND CONTROL	145
15.5 THE QUALITY CONTROL PANEL FUNCTION BUTTONS	146
15.5.1 ADDITIONAL HOT KEYS	146
15.6 QC KEYWORDS REFERENCE	147
15.6.1 KEYWORDS USED IN SETUP FILES	147
15.6.2 KEYWORDS USED IN LIMITS FILES	155
15.7 INTERACTING WITH EXTERNAL HARDWARE	156
15.7.1 CLIOQC AMPLIFIER&SWITCHBOX CONTROL	156
15.7.2 EXTERNAL TRIGGER	157
15.7.3 SIGNALS GENERATION	157
15.7.4 TIME DELAYS GENERATION	159
15.7.5 PARALLEL PORT SIGNALS MANAGEMENT	159

BIBLIOGRAPHY 161